

Elgento®

*To extend your warranty by a further year
please register your appliance
at the website below*

www.elgento.co.uk

TECHNICAL SUPPORT

If you require technical support or in the unlikely event that your purchase is faulty
please telephone our Helpline for immediate assistance.

0871 221 3619

Elgento®

125W

Hand Mixer



INSTRUCTION MANUAL

Guarantee.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement are at the discretion of the Retailer . The following conditions apply:

The product must be returned to the retailer with the proof of purchase. The product must be installed and used in accordance with the instructions contained in this instruction guide.

For domestic purposes. ONLY.

It does not cover wear and tear, damage, misuse or consumable parts.

PFD has limited responsibility for incidental or consequential loss or damage.

Valid in the UK and Eire only.

Technical Specification.

Product Code E12001EGL

23136030

AC: 220V-240V 50Hz


Power 125W

Sutton House,
Berryhill Road,
Fenton
Stoke on Trent
Staffordshire,
ST4 2NL.



Parts Identification

Speed selector &
Eject button

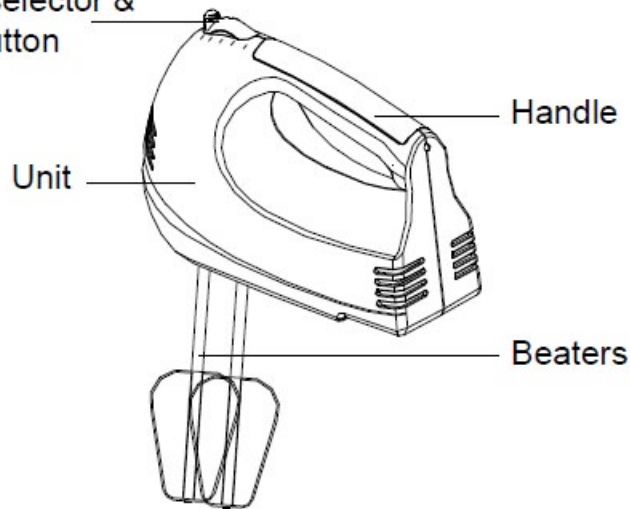

USING YOUR MIXER

1. For the first use, cleaning the beaters. Before assembling the mixer, be sure the power cord is unplugged from the power outlet and the speed selector is on the "0" position.
2. Assemble beaters into mixer. Beaters are used for beating eggs or similar food.
Note: Beaters can be inserted in either socket.
3. Plug in the power source.
4. Turn the speed selector to your desired setting, there is 5 setting. The appliance will start working.
Warning: Do not stick knife, metal spoons, fork and so on into bowl when operating.
5. The max operation time per time shall not exceed 3 minutes and minimum 10 minutes rest time must be maintained between two consecutive cycles.
6. When mixing is completed, turn the speed selector to 0 position, unplug the cord from power outlet.
7. If necessary you can scrape the excess food particles from the beaters by rubber or wooden spatula.
8. Hold the beaters with one hand and press the Ejection button firmly down with the other hand, remove the beaters.

Note: Remove the beaters only at the 0 setting, and make sure the power cord is unplugged from the power outlet before removing the beaters. Never pressing the Ejector button when the appliance is operating.

CLEANING AND MAINTENANCE

1. Unplug the appliance and wait it completely cool down before cleaning.
2. Wipe over the outside surface of the unit with a dampened cloth and polish with a soft dry cloth.
3. Wipe any excess food particles from the power cord.
4. Wash the beaters in warm soapy water and wipe dry. The beaters may be washed in the dishwasher.

Caution: the mixer cannot be immersed in water or other liquid.

COOKERY TIPS

1. Refrigerated ingredients, such as butter and eggs, them should be at room temperature before mixing begins. Set these ingredients out ahead of time.
2. To eliminate the possibility of shells or deteriorated-off eggs in your recipe, break eggs into separate container first, then adding to the mixture.
3. Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe. Fold into dry ingredients only until just combined. Always use the low speed.
4. Climatic conditions. Seasonal temperature changes, temperature of ingredients and their texture variation from area to area all play a part in the required mixing time and the results achieved.
5. Always start mixing at lower speed. Gradually increase to the recommended speed as stated in the recipe.

SPEED GUIDE

SPEED

MIXING TASKS

- 1 Stir Use when stirring liquid ingredients or when mixing dry and liquid ingredients together alternately in a recipe. Use when preparing any of the ready prepared or packaged instant puddings
- 2 Mix Use when a recipe calls for combining ingredients together. Use for quick breads or muffins that require a brisk action, just enough to blend (setting 3 and 4 are same).
- 3 Blend Use when preparing cake mixes or for directions calling for medium speed. Use to cream butter and sugar together.
- 4 Beat Use when preparing a frosting from a recipe or package. Use when whipping cream for desserts.
- 5 Whip Use to mash potatoes to develop a light and fluffy texture. Use when whipping egg whites.

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use check that the voltage of your wall outlet correspond to the one on the rating plate which is on the bottom of the appliance.
3. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
4. Do not let cord hang over edge of table or counter or hot surface.
5. Do not immerse cord or the body of mixer into water as this would give rise to electric shock.
6. If the supply cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
7. Close supervision is necessary when used near children .
8. Do not place an appliance on or near a hot gas or on a heated oven.
9. Never eject beaters or dough hooks when the appliance is in operation.
10. Do not leave mixer unattended while it is operating.
11. Unplug from outlet while not in use, before putting on or taking off parts, and before cleaning.
12. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury
13. Remove beaters from mixer before washing.
14. Always check that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from wall outlet.
15. Avoid contacting with moving parts.
16. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.
17. This appliance is not intended for used by children unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. Switch off the appliance before changing accessories or approaching parts which move in use.
20. Do not use outdoors.
21. Save these instructions.

HOUSEHOLD USE ONLY

