

## Clock Radio for iPhone and iPod with a lightning connector

LCRLI13



(iPod / iPhone not included)



# Contents

---

<b>Safety Warnings .....</b>	<b>4</b>
<b>Unpacking .....</b>	<b>6</b>
<b>Product Overview .....</b>	<b>7</b>
Top View .....	7
Rear View .....	7
Bottom View .....	8
LCD Display Window.....	8
<b>Power Source .....</b>	<b>9</b>
Mains Power .....	9
Memory Backup .....	9
Handling the Battery .....	9
<b>Basic Operation .....</b>	<b>10</b>
Powering ON/OFF .....	10
Selecting Modes.....	10
Adjusting the Volume.....	10
Setting the Clock.....	10
Setting the Alarm.....	10
Cancelling the Alarm .....	11
Snooze Function .....	11
Switching the Alarm Off .....	11
Sleep Timer Function.....	11
<b>AUX Operation .....</b>	<b>12</b>
<b>iPod/iPhone Operation .....</b>	<b>12</b>
Charging the iPod/iPhone .....	12
<b>Radio Operation .....</b>	<b>13</b>
Manual Tuning .....	13
Automatic Tuning .....	13
Programming Preset Stations.....	13
Selecting the Preset Stations.....	14
<b>Maintenance .....</b>	<b>14</b>
<b>Specifications.....</b>	<b>14</b>

## Safety Warnings

---

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

### **Damage**

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains adapter and consult your dealer.

### **Location of Unit**

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

### **Temperature**

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

### **Naked Flames**

- Never place any type of candle or naked flame on the top of or near the unit.

### **Moisture**

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Unplug the mains plug and consult your dealer.

### **Ventilation**

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

### **Safety**

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. while on holiday. Switch it off and disconnect the mains adapter from the mains socket.

### **Mains Adapter Cable**

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

### **Mains Adapter**

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the mains socket while unattended for long periods of time. Disconnect the adapter from the power supply.

### **Interference**

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

### Batteries

- Batteries used in the unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.

### Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

### Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

### Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit’s surface.
- Do not use liquids to clean the unit.

**Thank you** for purchasing your new Logik Clock Radio with a lightning connector.

 
We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


## Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

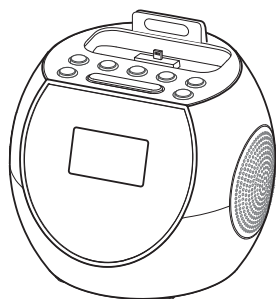

The Main Unit

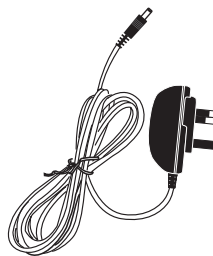 


Mains Adapter



If items are missing or damaged, please contact Partmaster (UK only).  
Tel: 0844 800 3456 for assistance.


## Product Overview
 
### Top View

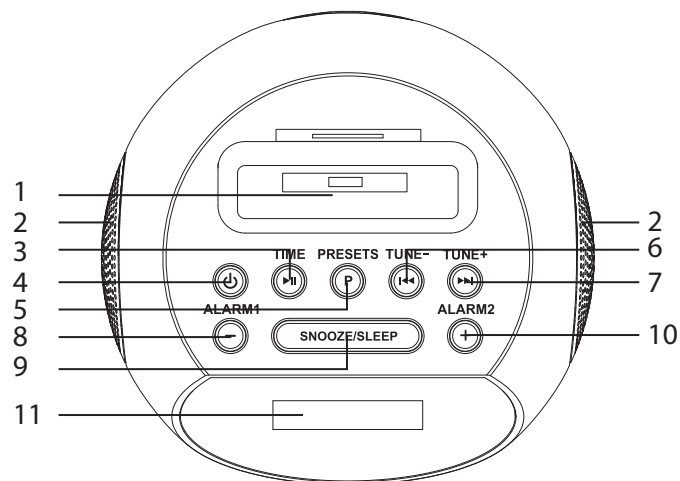


- |                                     |                                  |
|-------------------------------------|----------------------------------|
| 1. iPod/iPhone Dock                 | 7. <b>▶▶NEXT/TUNE+</b> Button    |
| 2. Speakers                         | 8. <b>VOLUME-/ALARM1</b> Button  |
| 3. <b>▶  PLAY/PAUSE/TIME</b> Button | 9. <b>SNOOZE/SLEEP</b> Button    |
| 4. <b>⏻STANDBY</b> Button           | 10. <b>VOLUME+/ALARM2</b> Button |
| 5. <b>PRESETS P</b> Button          | 11. LCD Display                  |
| 6. <b>◀◀PREV/TUNE-</b> Button       |                                  |

### Rear View

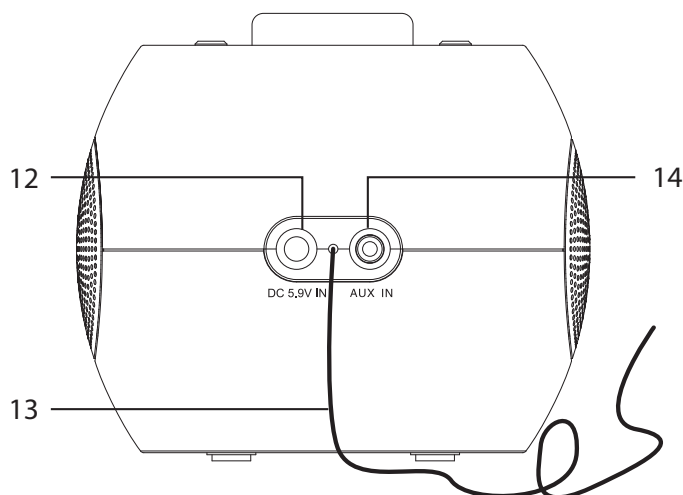 


- |                                 |                   |
|---------------------------------|-------------------|
| 12. DC 5.9V IN Power Connection | 14. AUX IN Socket |
| 13. FM Aerial Wire              |                   |

## Bottom View

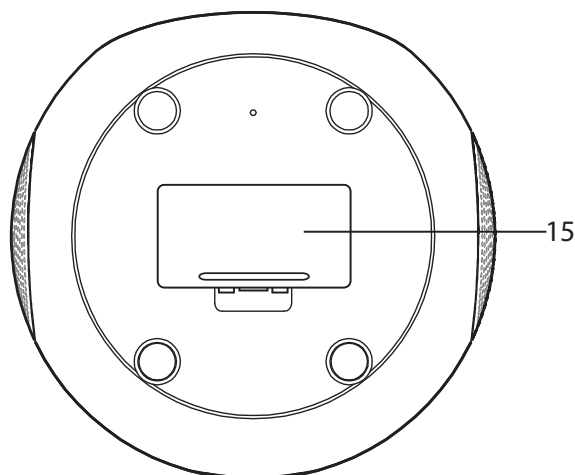 

### 15. Battery Compartment
 
## LCD Display Window

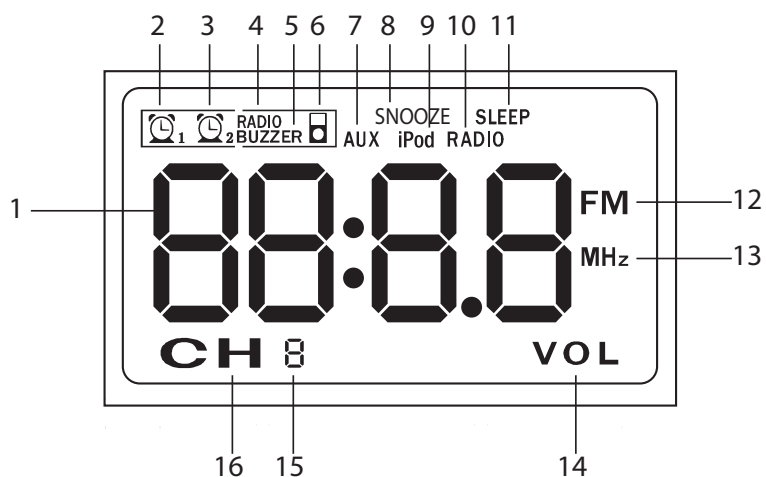


- |                                       |                                     |
|---------------------------------------|-------------------------------------|
| <b>1.</b> Time/FM Frequency Indicator | <b>9.</b> iPod Mode                 |
| <b>2.</b> Alarm 1 Indicator           | <b>10.</b> Radio Mode               |
| <b>3.</b> Alarm 2 Indicator           | <b>11.</b> Sleep Indicator          |
| <b>4.</b> Wake to Radio               | <b>12.</b> FM Indicator             |
| <b>5.</b> Wake to Buzzer              | <b>13.</b> MHz Indicator            |
| <b>6.</b> Wake to iPod                | <b>14.</b> Volume Indicator         |
| <b>7.</b> AUX Mode                    | <b>15.</b> Preset Station Number    |
| <b>8.</b> Snooze Indicator            | <b>16.</b> Preset Channel Indicator |



## Power Source
 
### Mains Power

Before using, connect the power cable of the supplied mains adapter (included) to the DC 5.9V socket at the rear of the unit and to the mains socket.

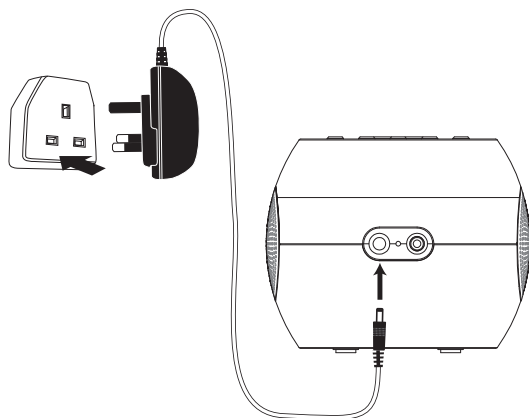


### Memory Backup

This unit incorporates a battery back up circuit that will keep the clock running in the event of a temporary power interruption. The clock will not be displayed.

Insert 2 X AAA batteries (not included) into the battery compartment located at the bottom of the unit.

 For best results, replace with fresh batteries every 9 to 12 months.

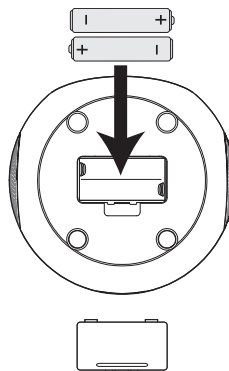

### Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly by following the polarity (+ and -) indications in the battery compartment.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of the used batteries as domestic waste. Dispose of them in accordance with local regulations.
- If you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.

## Basic Operation



Each enabled stage will be cleared in approximately 8 seconds if you do not press any button.

### Powering ON/OFF

When you first connect the unit to the mains socket, the unit will be in standby mode.

- Press the **⏻ STANDBY** button to switch the unit on.
- Press and hold the **⏻ STANDBY** button to switch the unit back to standby mode.
- Disconnect the power cable of the mains adapter from the mains socket if you want to switch the unit off completely.

### Selecting Modes

1. Press the **⏻ STANDBY** button to switch the unit on.
2. Press the **⏻ STANDBY** button repeatedly to switch modes (**AUX**, **iPod**, or **RADIO**).



### Adjusting the Volume

Press the **VOLUME +/-** button to increase/decrease the volume.

### Setting the Clock

1. In standby mode, press the **TIME** button, the hour digits will flash in the display.
2. Press the **⏮⏭** buttons to adjust the hour digits and then press the **TIME** button to adjust the minute digits.
3. Press the **⏮⏭** buttons to adjust the minute digits and then press the **TIME** button to confirm the clock setting.



### Setting the Alarm

1. In standby mode, press **ALARM 1** or **2**, the display will brighten and the "**🔔<sub>1</sub>**" or "**🔔<sub>2</sub>**" indicators will light, the word **BUZZER** will flash in the display.
2. Press the **⏮⏭** buttons to select which mode you want to wake up to (Buzzer, radio or iPod) then press **ALARM 1** or **2** depending which alarm you are setting.
3. Press the **⏮⏭** buttons to adjust the hour digits and then press **ALARM 1** or **2** to set the hours, the minutes will start to flash.
4. Press the **⏮⏭** buttons to adjust the minute digits and then press **ALARM 1** or **2** to set the minutes, the alarm is now set. The unit will switch back to clock mode. The "**🔔<sub>1</sub>**" or "**🔔<sub>2</sub>**" indicators will light up in the display to indicate the alarm is set.



- If RADIO/iPOD is selected as the alarm mode, make sure the volume is set to a level that can wake you up.
- If iPOD is selected as the alarm mode but your iPod is not connected to the iPod clock radio, it will automatically switch to BUZZER for the alarm mode.


 

## Cancelling the Alarm

1. To cancel the **ALARM** in standby press **ALARM 1** or **2**, the “1” or “2” indicators will disappear in the display.
2. Press **ALARM 1** or **2** again to reactivate the alarm using the previous setting.

## Snooze Function

1. Press the **SNOOZE/SLEEP** button when the **RADIO**, **iPod** or **Buzzer** alarm sounds. The snooze indicator “**SNOOZE/SLEEP**” will show in the display. The alarm will go off and will then sound again in approximately 8 minutes.

 
## Switching the Alarm Off

1. To turn off the alarm, press the  **STANDBY** button when the **RADIO**, **iPod** or **Buzzer** alarm sounds. The “1” and/or “2” indicators will still show in the display and the alarm function will still be active the next day.

## Sleep Timer Function

This function automatically switches the unit to standby mode after the preset time has elapsed, allowing you to fall asleep while listening to music.

1. To activate the sleep timer function, press the **SNOOZE/SLEEP** button repeatedly to select the sleep time (in minutes). It will change in the following sequence with every press:



2. When the display shows your desired sleep time, release the button. The “**SLEEP**” indicator will show in the display to indicate that the sleep timer function is activated. The time begins to count down from the number of minutes selected.
3. To cancel the sleep timer function, press the **SNOOZE/SLEEP** button repeatedly until “00” shows in the display. The “**SLEEP**” indicator will turn off in the display.

## AUX Operation

---

1. Before connecting to the mains socket, use the audio LINE IN cable to connect your audio device through its AUX IN socket at the rear of the unit.
2. Connect the power cable of the supplied mains adapter into the DC 5.9V socket at the rear of the unit and to the mains socket. The unit will be in standby mode.
3. Press the **⏻ STANDBY** button to switch the unit on.
4. To select the AUX mode, press the **⏻ STANDBY** button repeatedly to switch modes until the "**AUX**" shows in the display.
5. In AUX mode, you may operate your audio device directly for playback features. You may need to adjust the volume on the AUX device as well as your unit.

## iPod/iPhone Operation

---

Your unit will work with the following: iPhone 5, ipod touch (5th generation) and ipod nano (7th generation).

1. In standby mode, carefully connect your iPod/iPhone to the iPod dock.
2. Press the **⏻ STANDBY** button to switch the unit on.
3. To select iPod mode, press the **⏻ STANDBY** button repeatedly to switch modes until "**iPod**" shows in the display.
4. In iPod mode, press the **▶||** button to start music playback from your iPod.
5. While playing music, you can:
  - Press the **▶||** button to pause playing. Press the **▶||** button again to resume playing.
  - Press the **◀◀** or **▶▶** button to skip to previous/next track.
  - Press and hold the **◀◀** or **▶▶** button to search forwards/backwards through the current track.
  - Press the **VOLUME+** or **VOLUME-** button to increase/decrease the volume.



You may still operate your iPod/iPhone directly with its iPod/iPhone menu to access other features.

## Charging the iPod/iPhone

Your iPod/iPhone has a built-in rechargeable battery. The battery is charged automatically whenever the iPod/iPhone is connected to the iPod dock in standby, AUX, iPod or radio mode.



- If you charge the iPod while playing music, it may take longer than usual.
- It is not recommended to charge your iPod/iPhone in radio mode as it may interfere with the reception.

## Radio Operation

1. In standby mode, press the **⏻ STANDBY** button to switch the unit on.
2. To select the radio mode, press the **⏻ STANDBY** button repeatedly to switch modes until the "**RADIO**" shows in the display.
3. Make sure the FM aerial wire located at the rear of the unit is unwound and extended to its full length. You may need to adjust its position and direction until you reach a position that provides the best reception for your favourite FM stations.

### Manual Tuning

1. In radio mode, press **TUNE+/-** buttons until you reach the desired frequency or the reception is at its best.

 
 
### Automatic Tuning

1. In radio mode, press and hold the **TUNE+/-** buttons until the unit starts to search up or down the frequency band. The tuner will automatically search for the first station of sufficient signal strength.
2. Repeat the above step if you wish to select another station.

### Programming Preset Stations

Your unit can store up to 10 radio stations in its memory.

1. After you have tuned to your desired station in radio mode, press and hold the **PRESETS P** button. The display will flash and memory indicator will show in the display.
1. Press the **TUNE+/-** buttons repeatedly to select the preset station number. The display will first show "0" and then flash.
1. When your desired preset station number appears, press the **PRESETS P** button to confirm your selection. The current station will then be stored in your preset number.
2. Repeat the above steps to programme more preset stations or to overwrite a stored preset station.

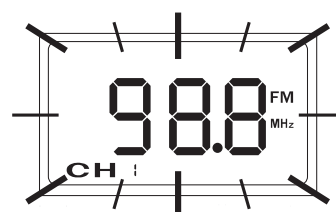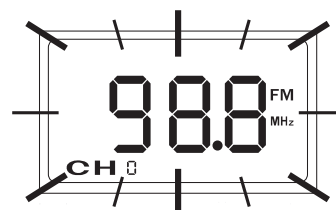

## Selecting the Preset Stations

1. In radio mode, press the **PRESETS P** button once. The preset number will appear in the display.
2. Press the **TUNE+/-** buttons repeatedly to select the preset station number shown on the display window.
3. Press the **PRESETS P** button to select the preset station.



## Maintenance



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

## Specifications

<b>Model</b>	<b>LCRLI13</b>
<b>Power Adapter</b>	5.9V 2.0A
<b>Power Consumption</b>	Standby: 0.5W Operating: 1W
<b>Stereo Output</b>	2 x 1.5W speakers
<b>Radio Frequency Range</b>	FM: 87.5 - 108 MHz

Features and specifications are subject to change without prior notice.



For general information about this appliance and handy hints and tips, please visit [www.knowhow.com/knowledgebank](http://www.knowhow.com/knowledgebank) or call **0844 5611234**.



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver them directly to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

#### Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.



iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Lightning is a trademark of Apple Inc.

DSG Retail Limited (Registered in England No. 504877)  
Maylands Avenue, Hemel Hempstead, Hertfordshire HP2 7TG. UK

(IB-LCRLI13-130700)